Adding Vehicles to the Bongo IoT Platform: Two Methods

Method 1: Adding Vehicles via Tracking

- Navigate to the "Side Menu Bar" and select "Tracking."
- Click on the "Add vehicle" arrow icon.
- You will be directed to the vehicle registration page.

Method 2: Adding Vehicles via Settings

- Access the "Side Menu Bar" and choose "Settings."
- Go to setting > General > Vehicle/Object
- Click on the "Add vehicle" plus symbol.
- This action will open the vehicle registration page

Vehicle Registration Page:

- On the vehicle registration page, ensure you provide the mandatory information
- Proceed to set up the vehicle profile, entering relevant details.
- This is the place to upload essential vehicle documents.
- After completing the necessary details, click the "Save" button to
- successfully add the vehicle to the platform.

These steps offer two pathways to add vehicles to the Bongo IoT Platform. Whether you choose the **"Tracking"** or **"Settings"** method, following these instructions will allow you to seamlessly integrate vehicles, set up profiles, and ensure all crucial information is readily available on the platform.

* +			
bongciot.com/jsp/index.html			• Q (c + Q = 0 + 1 #
Datend Bearus	Astar	10	Иркутск, Сла
dd Object			
General Profile Sensors Document Private Mode			
	Reseller* :	Bongo Technology Limited	
	Company*:	Bongo IoT	
	Branch* :	ADAS and DMS	
	Name* :		
Q Q O Y Iz	Device Type*:	General General 5004	
[2]	IMEI Number* :		
	Copy From :	Select	
1	Server Address :	13.127.228.11:5004 (TCP)	
	SIM Number :		
V	Secondary SIM Number :		
+ ? 🖻 xts xts 🗙 🎘	Device Timezone :	UTC+00:00	
	Distance Counter :	GPS	
	Unit of Distance :	Kilometer	
	Speed Detection :	From Device	Go to Settings to activate Windows
	Distance Variation :	+ 0 0	6 <u>6</u>
ssearch 🖉 🔁 😨 🔚 🥐 🧕 🔇 🦉 🔛 🚱		screen rec	🤯 864 Haze 🗠 🍫 🖸 🕼 1813 AM