

Live Tracking Vehicle In The Bongo IoT Platform

Access Live Tracking:

- Navigate to the "Side Menu Bar" and select "Tracking."
- On the live tracking screen, you'll see vehicles displayed on the map.
- Each vehicle's status will be indicated, including: Running/Idle/Stopped/Inactive/No data
- Below the map, a list of vehicles will appear.
- You can click on any vehicle in the list, and it will be plotted on the map.
- In the vehicle sidebar menu, you can access details about the selected vehicle, including its status, duration, and other information.
- If you need to navigate to a particular location, use the "Navigate" option.
- In the "Tooltip Summary" tab, you'll find a summarized overview of the vehicle's: Distance traveled/Travel stages/Duration in various stages

Fuel Data:

- Check the "Fuel" tab to check live Fuel data.

Today Activity:

- On this tab vehicle per day activity will appear
- This tab displays various diagnostic information related to OBD parameters.

Current Location

- The "Current Location" tab allows you to view the real-time location of the vehicle.

By following these steps, the driver can use their credentials to log in to the Bongo IoT smartphone application.

